

## **Tire Traction**

Your Missile Launcher Locomotive is equipped with two rubber traction tires (Lionel part no. 610-6001-065) to enhance tractive effort. Traction tires allow your locomotive to pull more cars at once. Refer to Figure 1.

During the course of normal operations, the traction tires may become worn. Replacement traction tires are available from your authorized Lionel Service Center or from Lionel Service. Simply slip the worn traction tire off the drive wheel, and then position the replacement in the groove with a small screwdriver.

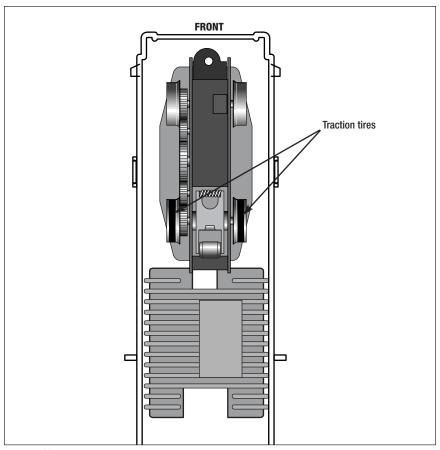


Figure 1. Traction tire