

71-4160-250
11/02



***Lionel
Frank's Hot Dog Stand
Owner's Manual***

Congratulations!

Congratulations on your purchase of the Frank's Hot Dog Stand! This accessory features three animated figures—the hot dog vendor, the customer, and a dachshund with an illuminated hot dog carousel.

Table of contents

| | |
|--|---|
| Wiring your Hot Dog Stand for conventional (non-Command) operation | 3 |
| Wiring and operating your Hot Dog Stand with TrainMaster Command Control | 4 |
| SC-2 wiring and operation | 4 |
| Accessory Switch Controller wiring and operation | 5 |
| Replacing the lamp | 6 |
| Notes | 7 |
| Limited Warranty/Lionel Service | 8 |

The following Lionel marks may be used throughout this instruction manual and are protected under law. All rights reserved.

Lionel®, *TrainMaster®*, *Odyssey®*, *RailSounds™*, *CrewTalk™*, *TowerCom™*, *DynaChuff™*, *StationSounds™*, *Pullmor®*, *ElectroCoupler™*, *Magne-Traction®*, *CAB-1 Remote Controller®*, *PowerMaster®*, *Lionel ZW®*, *ZW®*, *PowerHouse®*, *TMCC™*, *Lionelville™*

Wiring your Hot Dog Stand for conventional (non-Command) operation

Your Hot Dog Stand operates best at 12-18 volts (AC). As illustrated in Figure 1, you may connect the accessory to a separate power supply or to a Lionel Lock-On (available separately, 6-62900) connected to your track. You will need the ends of the wires to be stripped back 1/4" to 3/8".

Caution! To strip the wires, use a pair of wire strippers or a sharp knife. Only an adult should perform this task! Always use care when stripping wires.

1. Attach one wire to one of the thumb screw terminals. Connect it to the Power/A terminal on your power supply OR to the #1 terminal on your Lock-On.
2. Attach another wire to the remaining thumb screw terminal. Connect it to one of the terminals on the small switch included with this accessory.
3. Attach another wire to the remaining switch terminal. Connect it to the Common/Ground/U terminal on the power supply OR to the #2 terminal on the Lock-On.

Slide the switch to the ON position to activate the light and animation.

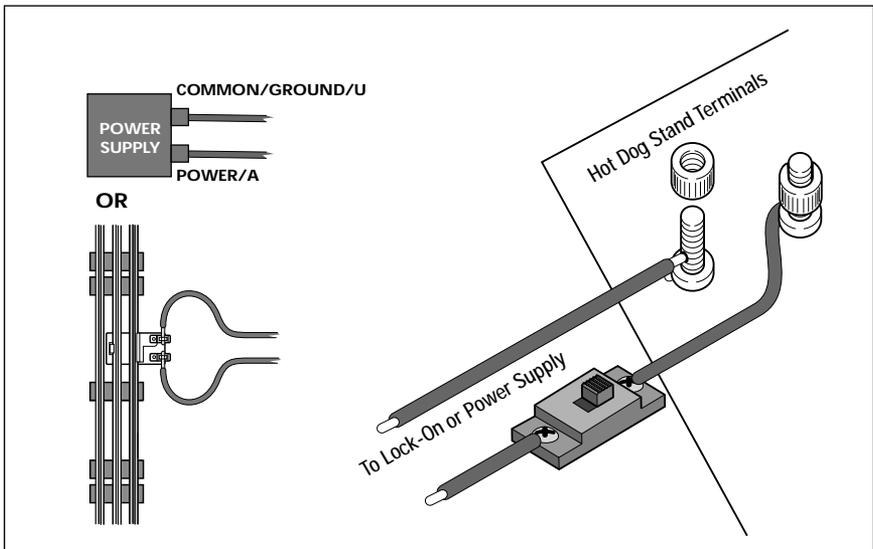


Figure 1. Power connections

Wiring and operating your Hot Dog Stand with TrainMaster Command Control

You may choose to wire your accessory with an SC-2 Switch and Accessory Controller (available separately, 6-22980) or the Accessory Switch Controller (available separately, 6-14182) for operation in the TrainMaster Command Control environment. Refer to these manuals for additional information.

Note! We recommend that you use 22-gauge or heavier wire.

SC-2 wiring and operation

Three wires are needed to connect your Hot Dog Stand to the SC-2 and a separate accessory transformer. Refer to Figure 2.

1. Attach one wire to the transformer Common/Ground/U terminal and connect it to the accessory COMM (common) position on the SC-2.
2. Connect one of the Hot Dog Stand terminals to the accessory ON/OFF toggle position on the SC-2.
3. Finally, connect the remaining Hot Dog Stand terminal to the transformer Power/A terminal.

Use the AUX2 button on your CAB-1 Remote Controller to toggle the Hot Dog Stand ON and OFF.

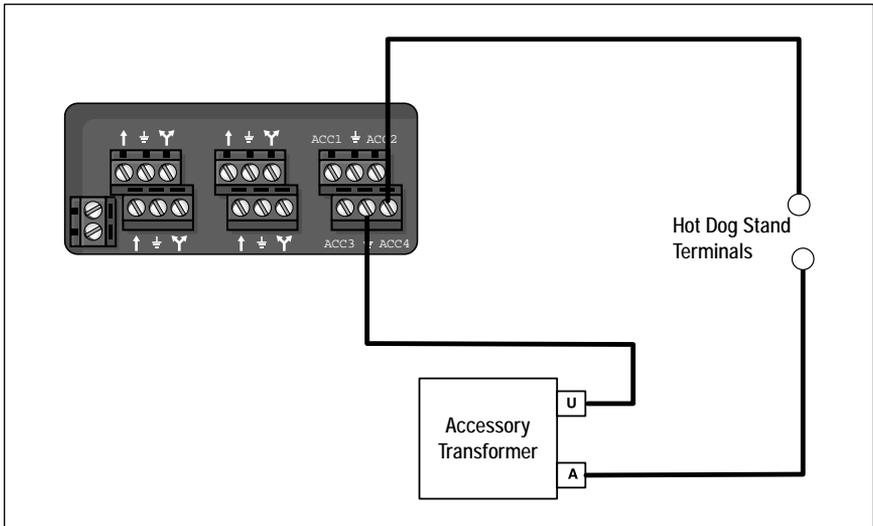


Figure 2. SC-2 connections

Accessory Switch Controller wiring and operation

Three wires are needed to connect your Hot Dog Stand to the Accessory Switch Controller (ASC) and a separate accessory transformer. Refer to Figure 3.

1. Attach one wire to the transformer Power/A terminal and connect it to the COMM terminal on the ASC.
2. Connect one of the Hot Dog Stand terminals to a numbered accessory terminal on the ASC.
3. Finally, connect the remaining Hot Dog Stand terminal to the transformer Common/Ground/U terminal.

Use the AUX2 button on your CAB-1 Remote Controller to toggle the Hot Dog Stand ON and OFF.

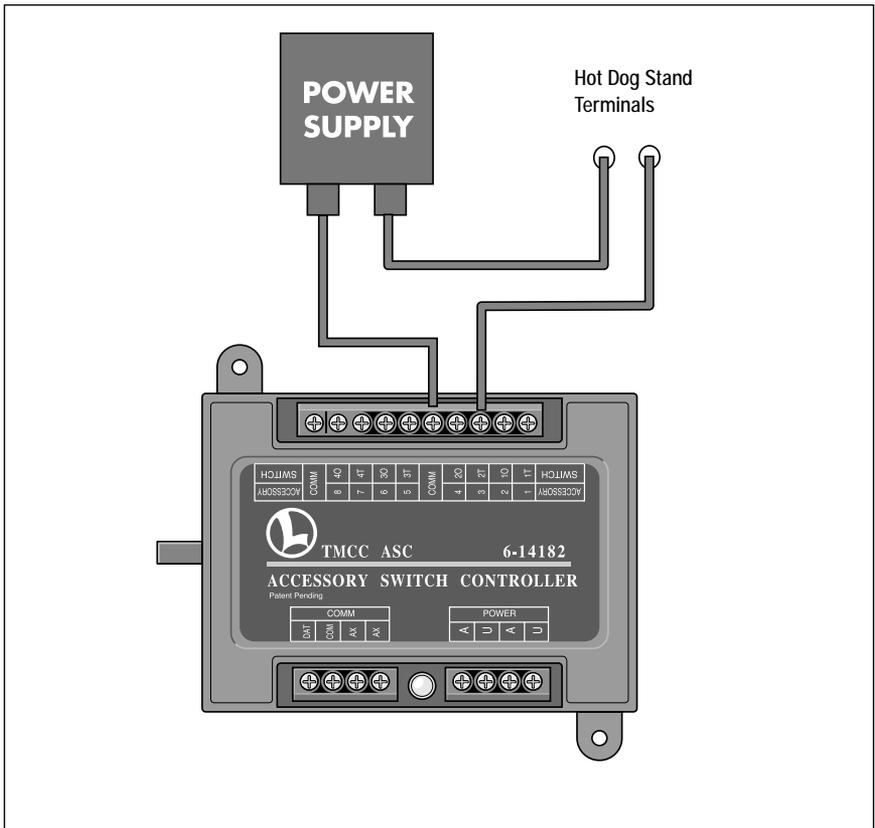


Figure 3. ASC connections

Replacing the lamp

The Hot Dog rotisserie is illuminated by one lamp, Lionel part no. 610-4143-300, that is located beneath the counter. During the course of normal operations, this lamp may require replacement. New lamps are available from your authorized Lionel service center or from Lionel Service.

1. Cycle the accessory so that the figure is away from the counter.
2. Remove the Hot Dog Stand roof.
3. Remove the screw from the tab on the Hot Dog Stand wall. Located inside the building, the screw passes through the tab and into the base. Refer to Figure 4.
4. Lift the sides of the building off the base. Lift up the side with the tab, then slide the entire building toward that side.
5. Slide down the lamp holder, then carefully pull the entire socket out of the slot.

Caution! The edges of the socket may be sharp.

6. Unscrew the lamp and install the replacement.
7. Reassemble the accessory, following these steps in reverse order.

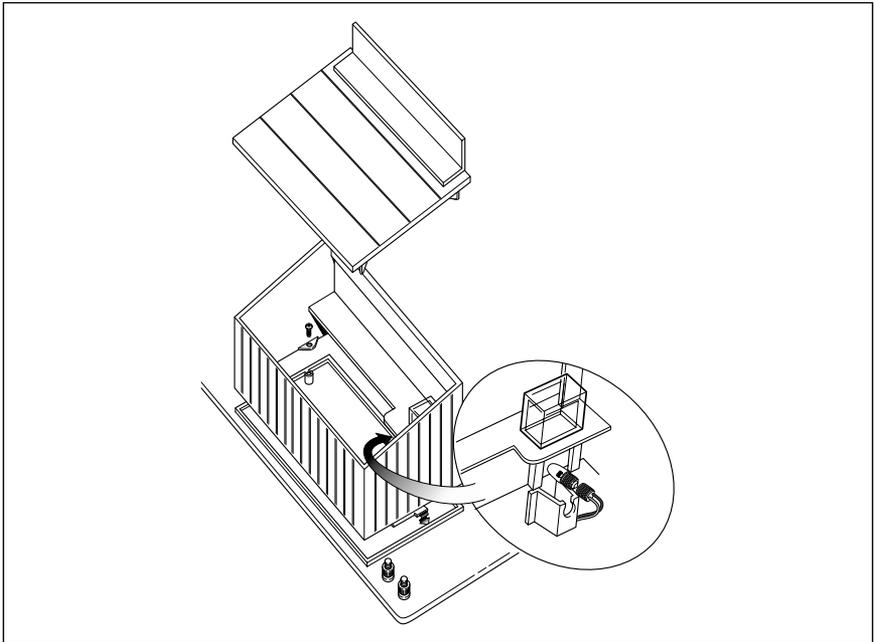


Figure 4. Lamp replacement

Limited Warranty/Lionel Service

This Lionel product, including all mechanical and electrical components, moving parts, motors and structural components, except for light bulbs, is warranted to the original consumer-purchaser, for **one year** against original defects in materials or workmanship when purchased through an authorized Lionel merchant.

This warranty does NOT cover normal wear and tear, light bulbs, defects appearing in the course of commercial use, or damage resulting from abuse or misuse of the product by the purchaser. Transfer of this product by the original consumer-purchaser to another person voids this warranty. Modification of this product voids this warranty.

Any warranted product which is defective in original materials or workmanship and is delivered by the original consumer-purchaser to Lionel L.L.C. or an authorized Lionel L.L.C. Service Center, together with proof of original purchase will, at the option of Lionel L.L.C., be repaired or replaced, without charge for parts or labor. In the event the defective product cannot be repaired, and a replacement is not available, a refund of the original purchase price will be granted. Any products on which warranty service is sought must be sent freight or postage prepaid, as transportation and shipping charges are not covered by the warranty.

In no event shall Lionel L.L.C. be liable for incidental or consequential damages.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Instructions for Obtaining Service

If service for this Lionel L.L.C. product is required, bring the item, along with your dated sales receipt and completed warranty information to the nearest Authorized Lionel Service Center.

Your nearest Lionel Service Center can be found by calling 1-800-4-Lionel, or by accessing our Website at www.lionel.com.

If you prefer to send your product back to Lionel L.L.C. for repair in Michigan, you must first call 586-949-4100 or FAX 586-949-5429, or write to Customer Service, P.O. Box 748, New Baltimore, MI 48047-0748, stating what the item is, when it was purchased and what seems to be the problem. You will be sent a return authorization letter and label to ensure your merchandise will be properly handled upon receipt.

Once you have received your return authorization and label, make sure that the item is packed to prevent damage during shipping and handling. We suggest that you use the product's original packaging. This shipment must be prepaid and we recommend that it be insured.

Please make sure you have followed all of the above instructions carefully before returning any merchandise for service. You may choose to have your product repaired by one of our Authorized Lionel Service Centers after its warranty has expired. A reasonable service fee will be charged.

Warranty Information

Please complete the information below and keep it, along with your dated sales receipt. You must present this and your dated sales receipt when requesting warranty service.

Name _____

Address _____

Place of Purchase _____

Date of Purchase _____

Product Number _____

Product Description _____

